

INSTRUCTION SHEET



SOUND CONTROL KIT FOR 98-13 H-D FLTR

INCLUDED COMPONENTS:

- Pre-cut Dynamat Xtreme (14)
- Pre-cut Dynaliner (7)

HELPFUL FOR INSTALLATION:

- Gloves
- Utility Knife

QUESTIONS?



EMAIL:
info@getklocked.com
CALL: (605) 996.3700



1



2



3



4



5



6

1. Remove outer fairing and rest on a soft cloth.
2. Clean any dust and debris from inside the outer fairing.
3. Test fit Dynamat Xtreme to check for alignment and position with paper backing still attached. **{1 and 2}**
4. Remove paper backing to expose butyl layer.
5. Apply Dynamat Xtreme to designated area using light pressure at first, to aide in adjustment. **{3}**
6. Smooth outward to prevent air pockets. Use a rag or gloves to flatten the Dynamat Xtreme and work into contours of the fairing. If an air pocket develops, simply puncture with a knife or pin and roll smooth.
7. Test fit Dynaliner to check alignment with paper backing still attached. **{4 and 5}**
8. Peel the release liner, and apply **Dynaliner (Components A2, B2, C2, F2, G2, J2, and K2)** directly to the **Dynamat Xtreme**, pressing it firmly into place. **{6}**

CAUTION: Klock Werks cannot be held responsible for any damage to painted surfaces during removal or addition of Klock Werks parts.

COMPONENT SHEET

DYNAMAT




DYNALINER



Dynamat components designated with a 1 must be applied before Dynaliner components designated with a 2.

OUTER FAIRING

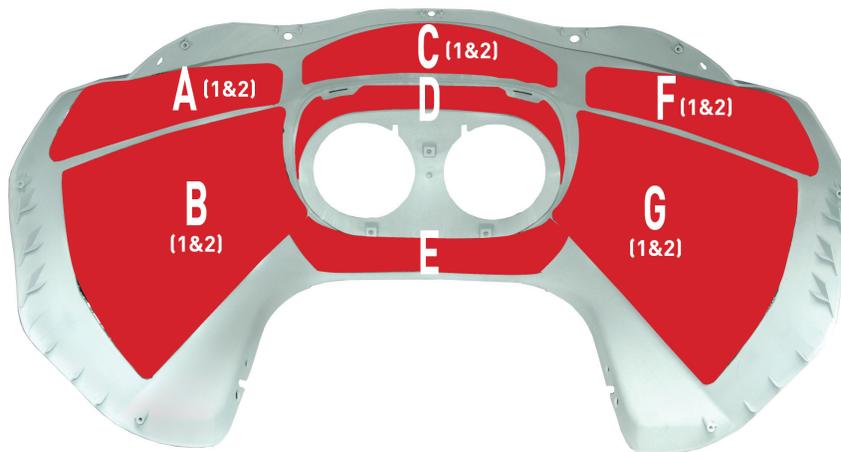

INNER FAIRING

