




INDIAN | FITS 2014+ SPRINGFIELD, VINTAGE, CHIEFTAIN & ROADMASTER

1. ADAPT

Clean the surface of your device case. Center the iOadapt™ on your case then apply with firm pressure to the case while on a flat surface and adhere.

Allow adhesive to set for at least 24 hours before attaching to iOcore. For best results, let set 72 hours before first use.

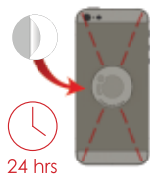

2. INSTALL

Tools Needed: T30 torx or 5mm allen depending on model year.

The Semisphere Mount bolts to the stock controls. Remove 2 bolts from the controls, line up the mount, and use the included hardware to tighten. Follow factory specs.



3. ATTACH

Once the iOcore is placed on the Semisphere, your device is ready to be firmly attached.




iOmounts™ SYSTEM COMPONENTS



iOadapt™

The iOadapt™ is a stainless steel disk that attaches to your smartphone, tablet, GPS or other approved device.

Note: The iOadapt™ is NOT a magnet!



iOcore™

The iOcore™ is a magnetic cylinder that connects your devices to the model-specific mounts, stands, wall mounts, car mounts and other iOmounts™ products once the iOadapt™ is adhered to your device.

POWERSPORTS APPLICATION

- ➔ iOadapts™ supplied with the nomad™ and model-specific mounts —for powersports applications— are intended for phones, GPS, and other smaller devices only, and will not support full-size tablets or larger devices.
- ➔ While a very strong 3M VHB adhesive is used, the iOadapt will not stick to all surfaces and materials. This includes rubber, silicon, soft-touch and other soft and/or textured surfaces.
For best results, Klock Werks recommends the use of a hard plastic type case.
- ➔ Each iOadapt™ utilizes permanent adhesive and is very difficult to remove once applied. Klock Werks and/or iOmounts™ are not responsible for any damages caused by the removal of the iOadapt™.

Warning: When riding or driving, please follow your state laws regarding device use.