

# UTV FLARE™ 2020+ CFMOTO ZFORCE Z950

**TOOLS NEEDED:**


- Rubber Mallet
- Shine Werks™

**INCLUDED COMPONENTS:**

- (1) UTV Flare™ Windshield
- (4) Axia Clamp Kits
- (1) Trim Kit

**QUESTIONS?**

- EMAIL: [info@getklocked.com](mailto:info@getklocked.com)
- CALL: (605) 996-3700

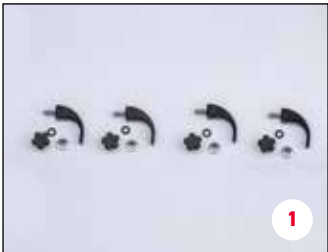

1. Remove the thumb screws, rubber washers, and nylon washers from the pre-assembled j-hook clamps.
2. Place the nylon washer onto the stud of the j-hook clamp.
3. After inserting the j-hook stud into windshield holes from the rear side, reinstall metal/rubber washer onto stud with rubber facing the windshield.
4. Install thumbscrew onto j-hook clamp.



5. A single piece of trim is provided for the bottom of the windshield.
6. The trim is installed so that the rounded seal faces the rear of the windshield.
7. Firmly press the trim onto the bottom lip of the windshield.



8. A rubber mallet may be needed to fully seat the trim (*BE GENTLE*).
9. Orientate the clamps so that they will clear the roll cage, then lay windshield onto hood and cage. Adjust position so there is a fingertip gap between windshield sides and body.
10. Rotate j-hooks and tighten down thumb screws, while keeping windshield centered.
11. Clean with Klock Werks Shine Werks, the recommended and safe cleaner for your UTV Flare™ Windshield.

