




BUILDER'S KIT | MOUNTS TO MOST FLAT SURFACES

The Semisphere has a 1 7/8" diameter and stands 5/8" proud of the mount surface.
With the iOcore installed the unit stands 1 1/8" proud of the mounting surface.

1. ADAPT

Clean the surface of your device case. Center the iOadapt™ on your case then apply with firm pressure to the case while on a flat surface and adhere.

Allow adhesive to set at least 24 hours before attaching to iOcore. For best results, let set 72 hours before first use.

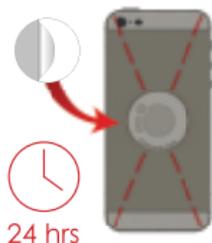

2. INSTALL

1. Choose any desired mounting surface with a 1 7/8" diameter to fully support the base of the Semisphere.
2. Mark the center of the desired mount point and drill a 1/4" hole to accommodate the supplied fastener.
3. Apply red thread locking agent to the bolt threads and torque the Semisphere to 120-150 in-lbs.

Additional hardware may be needed depending on the type of mounting surface (i.e. thicker, softer, blind holes etc.)



3. ATTACH

Once the iOcore is placed on the Semisphere, your device is ready to be firmly attached.



iOmounts™ SYSTEM COMPONENTS



iOadapt™

The iOadapt™ is a stainless steel disk that attaches to your smartphone, tablet, GPS or other approved device.

Note: The iOadapt™ is NOT a magnet!



iOcore™

The iOcore™ is a magnetic cylinder that connects your devices to the model-specific mounts, stands, wall mounts, car mounts and other iOmounts™ products once the iOadapt™ is adhered to your device.

POWERSPORTS APPLICATION

- ➔ iOadapts™ supplied with the nomad™ and model-specific mounts —for powersports applications— are intended for phones, GPS, and other smaller devices only, and will not support full-size tablets or larger devices.
- ➔ While a very strong 3M VHB adhesive is used, the iOadapt will not stick to all surfaces and materials. This includes rubber, silicon, soft-touch and other soft and/or textured surfaces.
For best results, Klock Werks recommends the use of a hard plastic type case.
- ➔ Each iOadapt™ utilizes permanent adhesive and is very difficult to remove once applied. Klock Werks and/or iOmounts™ are not responsible for any damages caused by the removal of the iOadapt™.

Warning: When riding or driving, please follow your state laws regarding device use.